

User Manual




Auto Touchless Hand Sanitizer Dispenser

Model - HSD-201770



Please read this manual before use


Product models

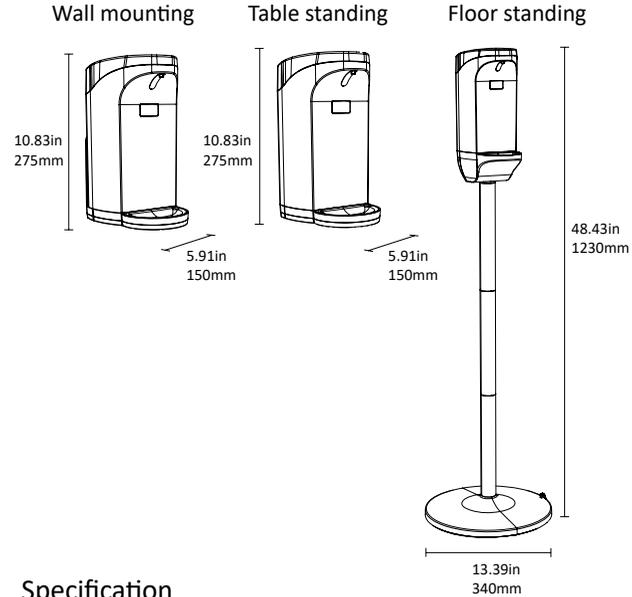

Specification


Model: HSD-201770 Series
 Sensor: Infrared
 Sensor Range: 3/4" to 4" (2-10 cm)
 Material: ABS White
 Capacity: 1000 ml
 Outlet: Foam
 Powered: 4 x AA batteries
 Compatible: AC/DC 6V 1A adaptor

Parts list

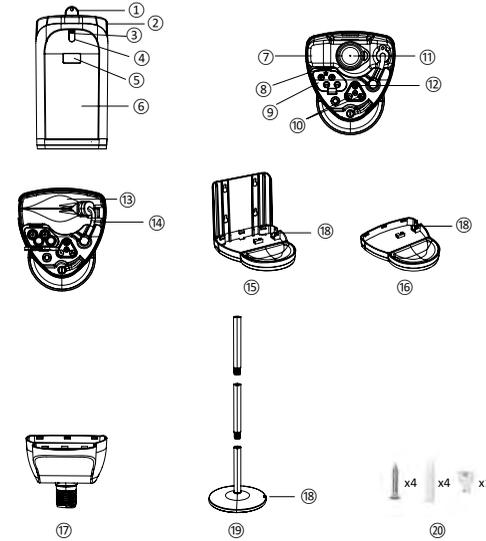

- ① Key
- ② The upper cover
- ③ Liquid spout
- ④ Infrared sensor
- ⑤ LED indicator
- ⑥ Main machine
- ⑦ Refillable plastic container
- ⑧ Battery cover
- ⑨ Battery holder
- ⑩ Adjustable button
- ⑪ Plastic container lid
- ⑫ Power switch (On/Off)
- ⑬ Disposable bag
- ⑭ Liquid pipe
- ⑮ Liquid Tray (Wall mounting)
- ⑯ Liquid Tray (Table standing)
- ⑰ Liquid Tray (Floor standing)
- ⑱ AC/DC adapter
- ⑲ Floor stand
- ⑳ Mounting kits & key

Wall Mount Instructions

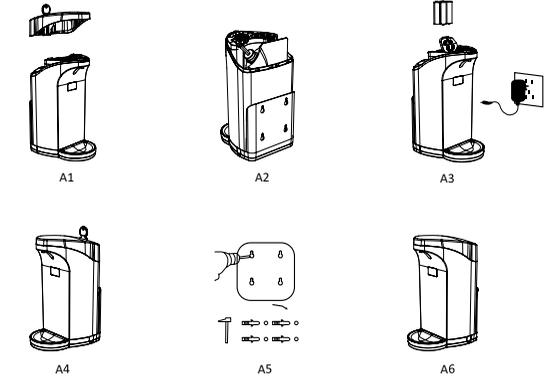


HSD-201770-WM

- A1 Insert the key on the top to open the upper cover.
- A2 Put disposable liquid bag into the dispenser and connect the inlet and outlet tube.
- A3 Install batteries or connect the AC/DC 6V 1A adaptor (Optional).
- A4 Close the upper cover and remove key.
- A5 Use the wall mount to mark wall anchor locations, Drill $\Phi 6 \times 30 \text{mm}$ and insert anchors in the wall.
- A6 Attach wall mount with 4 screws and attach the machine to the wall.

Caution:

1. Please ensure the outlet tube is installed completely to avoid content leakage.
2. Use the dispenser a few times to remove air from the bag prior to use for proper operation after refill.

Table Standing Instructions

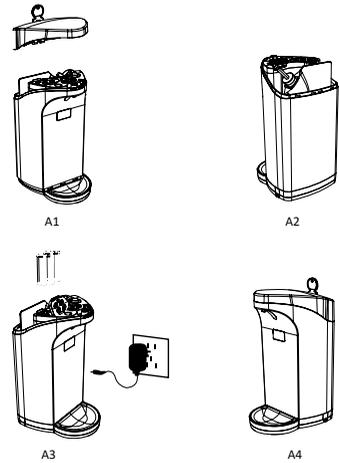


HSD-201770-TS

- A1 Insert the key on the top to open the upper cover.
- A2 Put disposable liquid bag into the dispenser and connect the inlet and outlet tube.
- A3 Install batteries or connect the AC/DC 6V 1A adaptor.
- A4 Close the upper cover and remove the key.

Caution:

1. Please ensure the outlet tube is installed completely to avoid content leakage.
2. Use the dispenser a few times to remove air from the bag prior to use for proper operation after refill.

Floor Standing Instructions

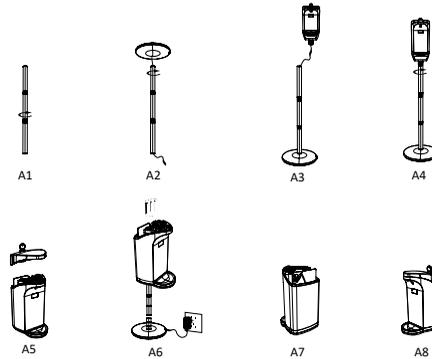


HSD-201770-FS

- A1 Assemble the three posts extension.
- A2 Flip the round base and feed the power wire through the post, then tighten the round base and the post.
- A3 Connect the power wire to the power connector at the bottom of the dispenser.
- A4 Connect and tighten the dispenser to the top post.
- A5 Insert the key on the top to open the upper cover.
- A6 Install batteries or connect the AC/DC 6V 1A adaptor at the side of the round base.
- A7 Put disposable liquid bag into the dispenser and connect the inlet and outlet tube.
- A8 Close the upper cover and remove the key.

Caution:

1. Please ensure the outlet tube is installed completely to avoid content leakage.
2. Use the dispenser a few times to remove air from the bag prior to use for proper operation after refill.

Operation

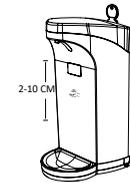

ON/OFF Operation

Press ON/OFF button(12), blue light flashing once means ON, yellow light flashing once means OFF.

Operation

Place hand below the dispenser, a blue light will flash steady and the nozzle will dispense. The sensor range is 3/4" to 4" (2-10 cm).

- * Use the dispenser a few times to remove air from the bag prior to use for proper operation after refill.
- * A little moisture in the dispenser is normal.

Adjustable Dosage


- * "▲" Normal 0.8mL (Default)
- * "▲▲" Larger 1.2mL



Battery Alert

Low battery alert but unit will still dispense. The yellow light will flash once every 3 seconds, place hand below the dispenser, a blue light will flash steady and the nozzle will dispense. Please replace with new batteries soon.

Low battery alert but unit does not dispense. The yellow light will flash once every 3 seconds, place hand below the dispenser, yellow light will flash twice and the nozzle will not dispense. Please replace with new batteries immediately.

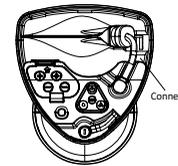

Obstruction Alert

The blue light will flash constantly if there are obstacles under the sensor.

Lock/Unlock

Unlock: Insert the key on the top and open the upper cover.
Lock: Remove the key.

Disposable bag replacement

1. Pull out the connector tube from the disposable bag.
2. Replace the disposable bag.
3. Connect the tube back in disposable bag.

General Warning

Children should be supervised to ensure that they do not play with the dispenser.

- ⚠ Warning
- ⚠ Caution
- ⊘ Don't Allow
- 🔥 Keep Fire Away
- ✔ Correct Operations
- ⚠ Do not use corrosive detergent or solvent to clean.
- ⚠ Remove the batteries if the dispenser will not be used for three months or more.
- ⊘ Do not place the product near or exposed to direct sunlight.
- ⊘ Do not rinse the dispenser directly with water.
- ⊘ Do not attempt to repair or change any parts by yourself.
- 🔥 Keep away from any fire and heat sources.
- ✔ Cleaning the dispenser regularly.
- ✔ Use a cloth when cleaning the dispenser.
- ✔ Keep the floor standing in a safe location.
- ✔ The floor standing dispenser can be mounted to the floor if necessary

Disposal



This device must be disposed of in accordance with state and local regulations.

